



#### FAN DETAIL

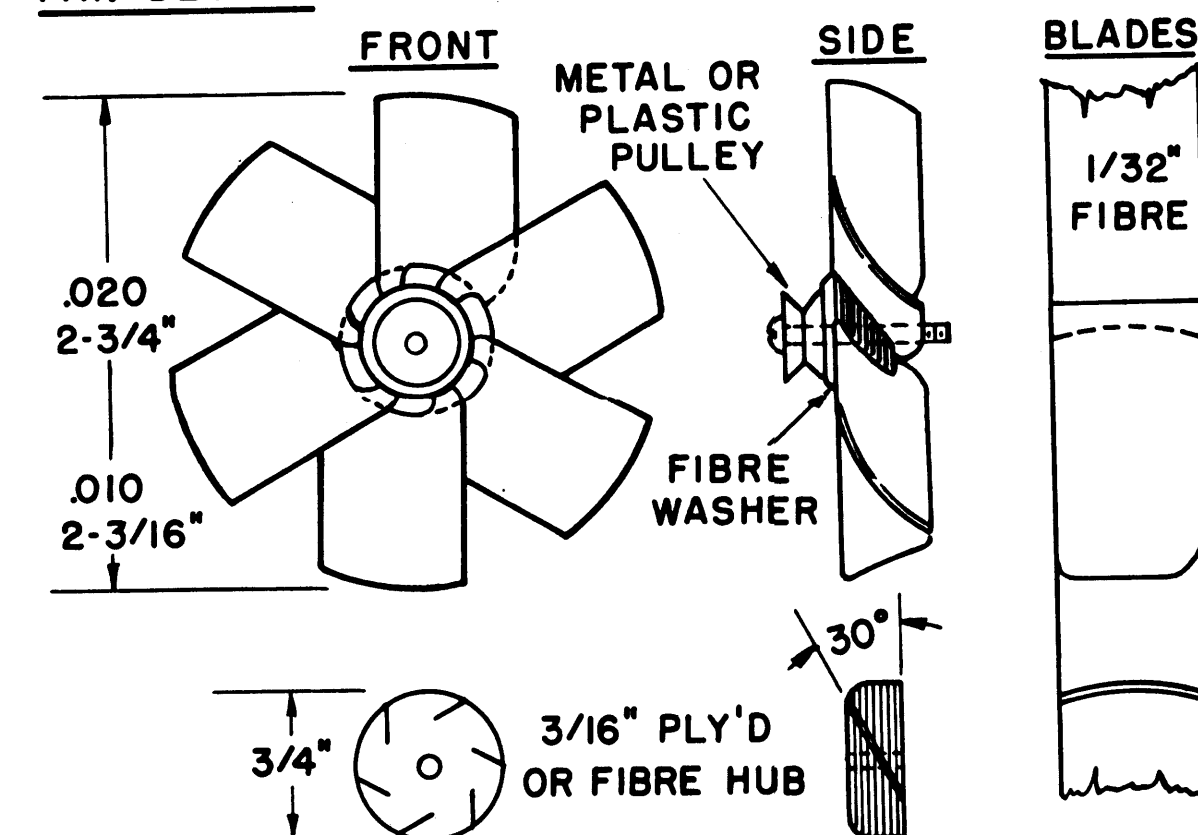


MAKE FAN BLADES IN ONE LONG STRIP. DAMPEN & CURVE SIMILAR TO FUSELAGE SHELLS. USE HEAT TO DRY & RETAIN CAMBER. CUT BLADES SLIGHTLY OVERSIZE. GLUE TO HUB WITH EPOXY. TRIM OFF BLADES & CAREFULLY BALANCE. FUEL PROOF.

#### ENGINE MOUNT & WING PLATFORM DETAIL

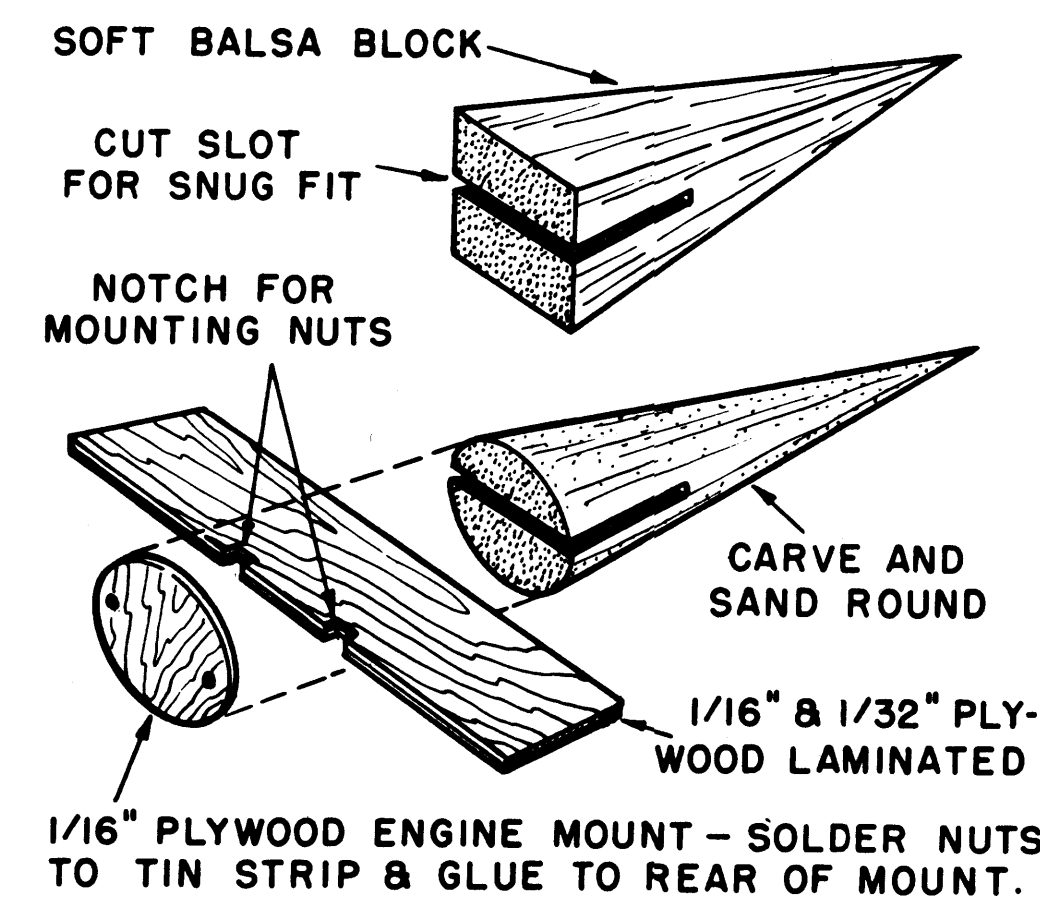




#### CARVE FROM MED. BALSA BLOCK

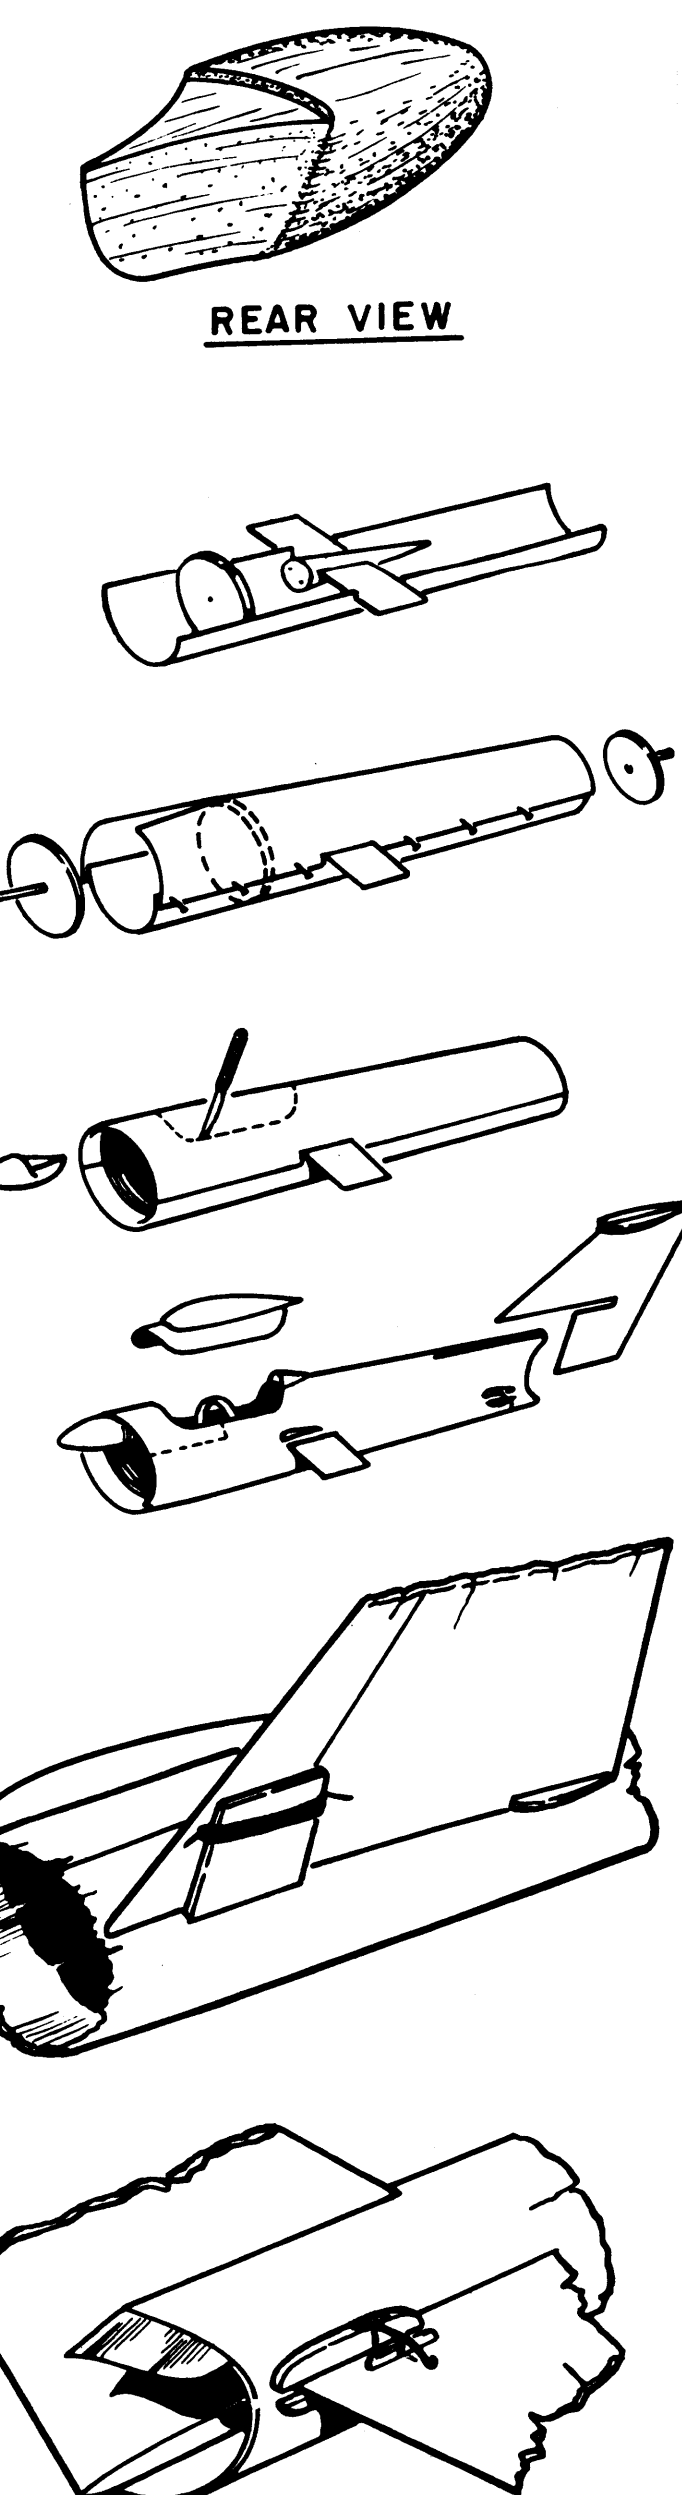

## DUCTED FAN SHRIKE

Copyright 1964  
The Conde Nast Publications Inc.



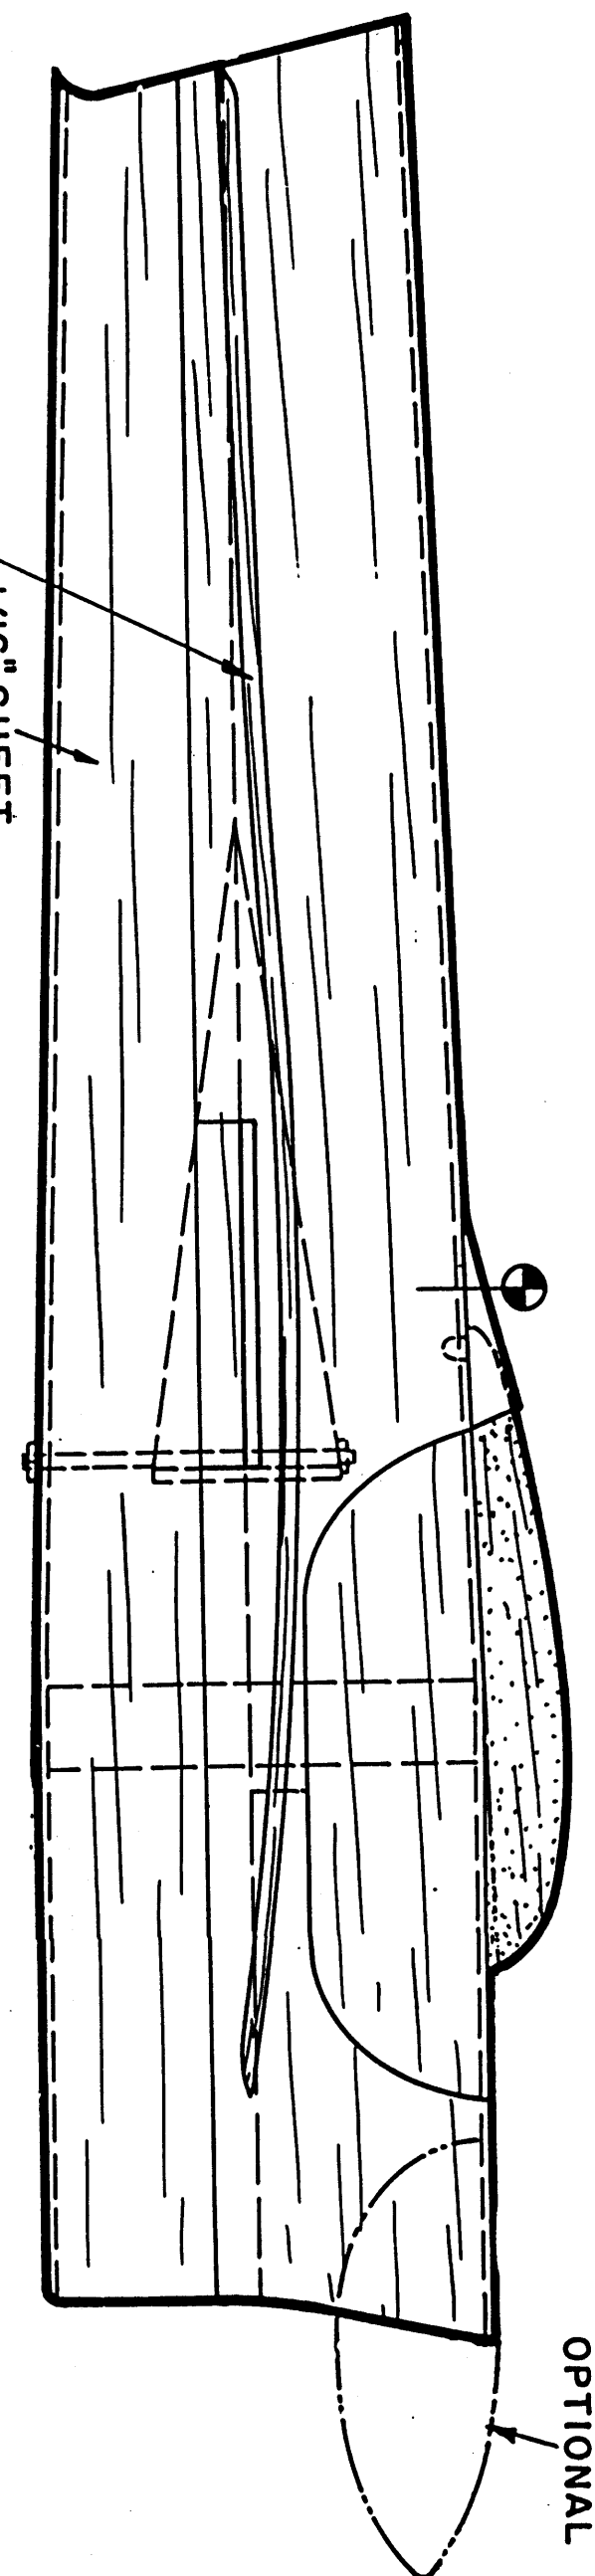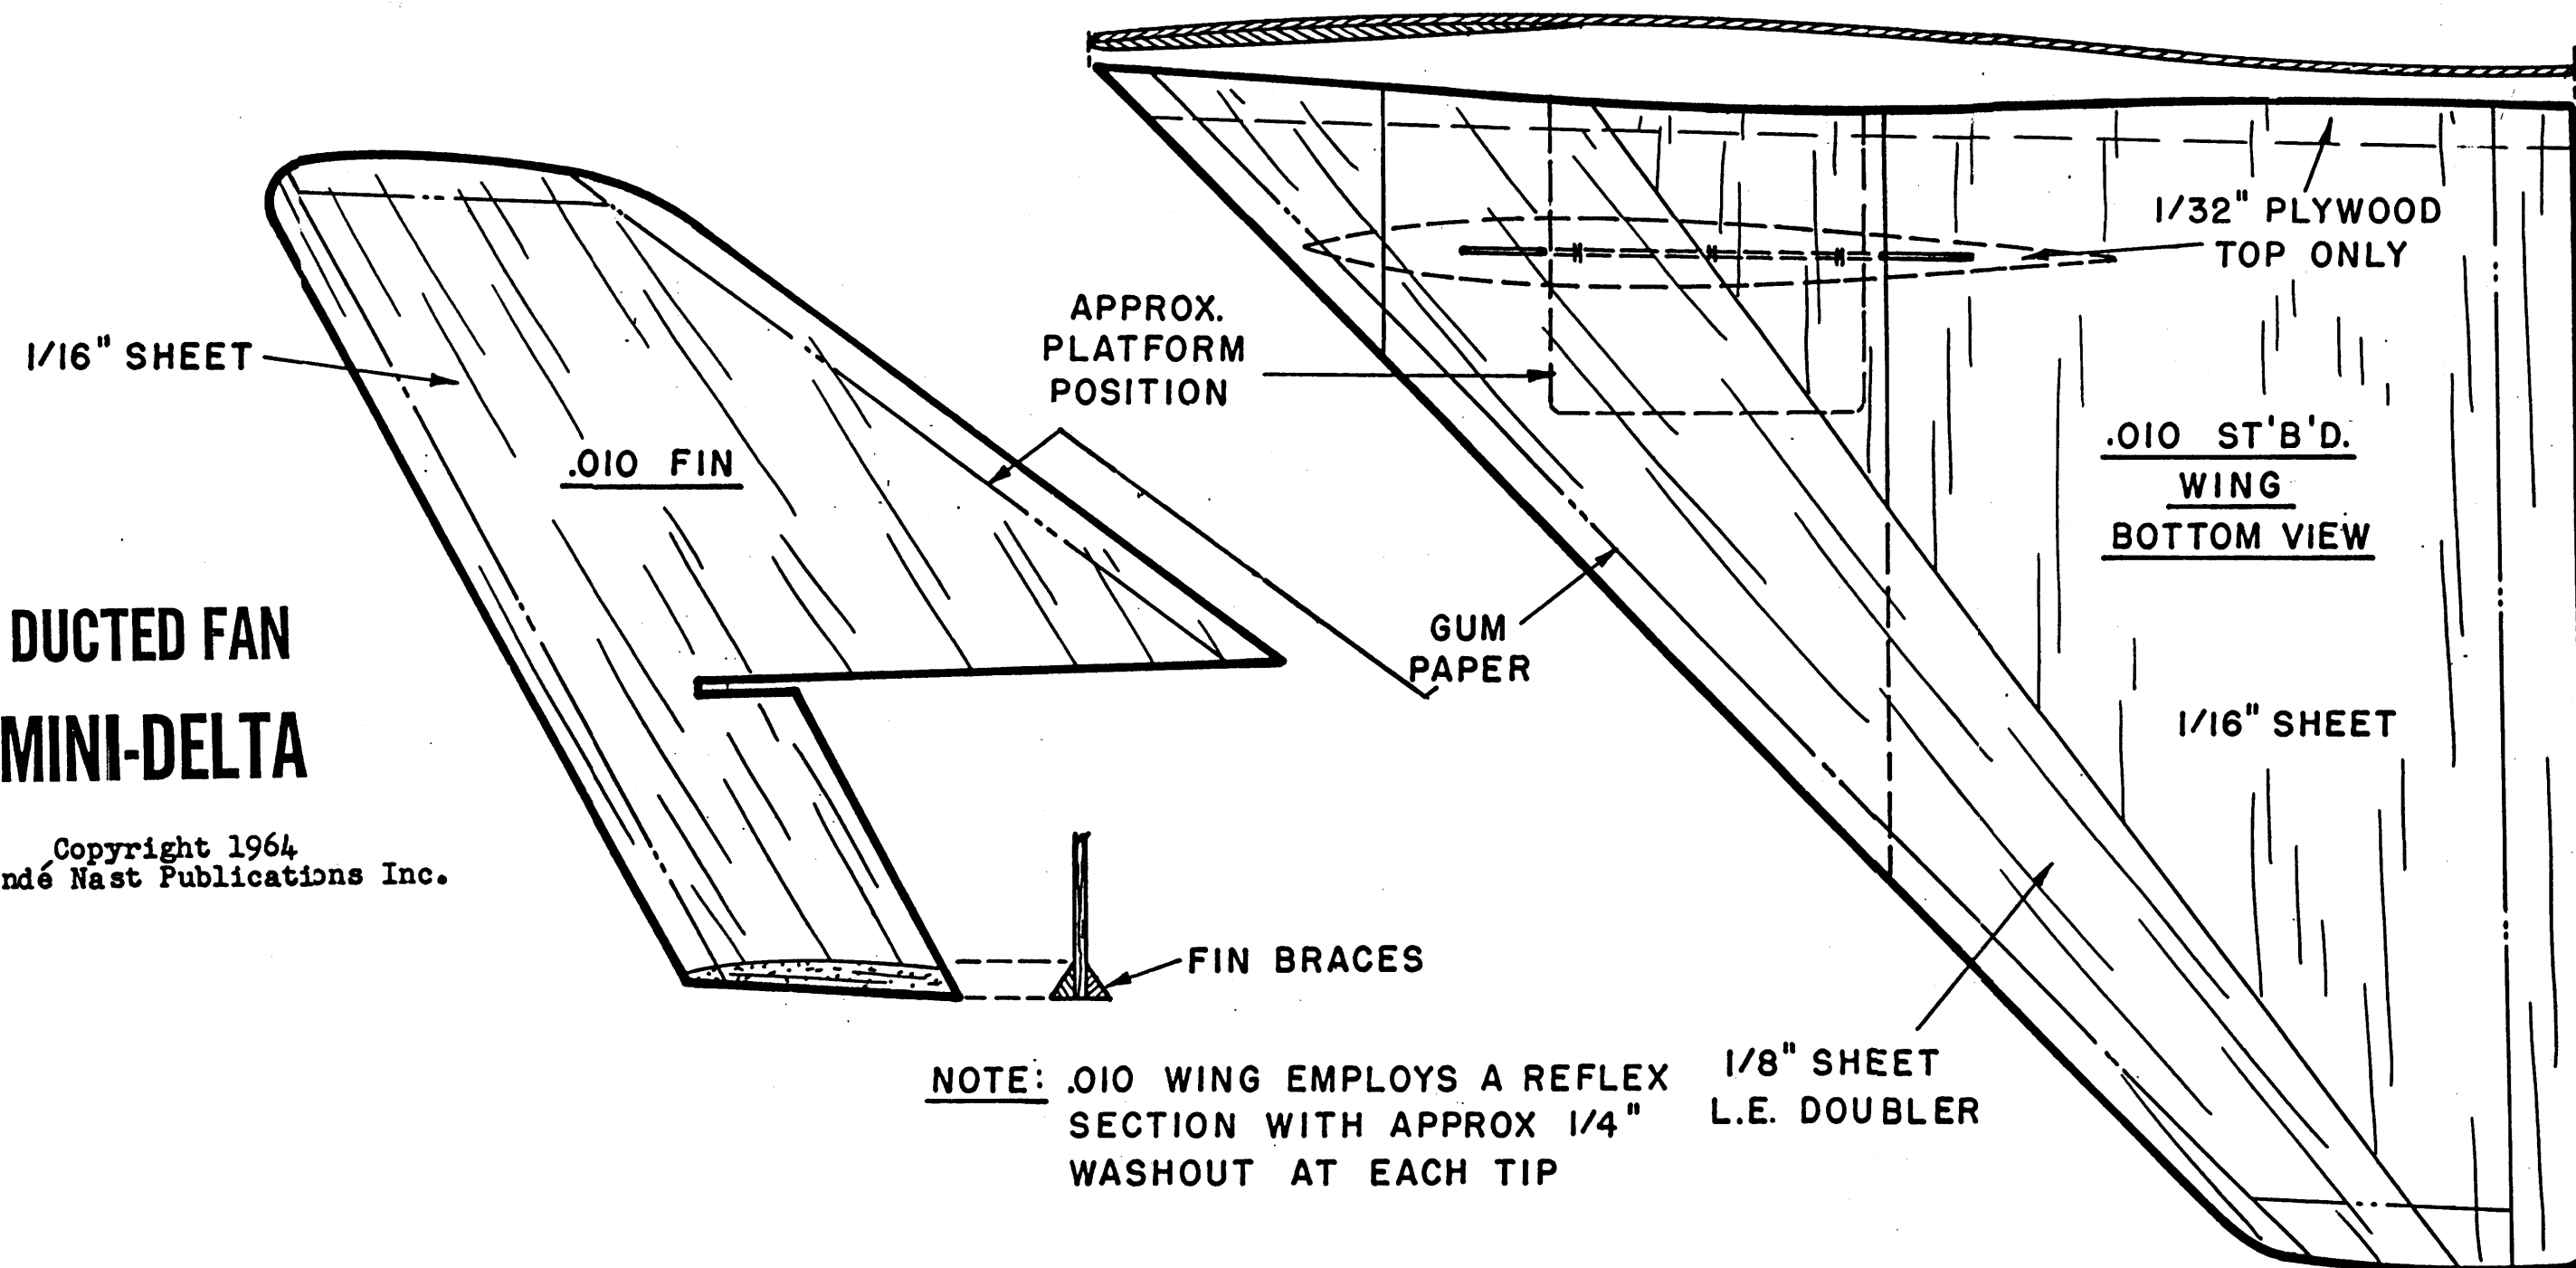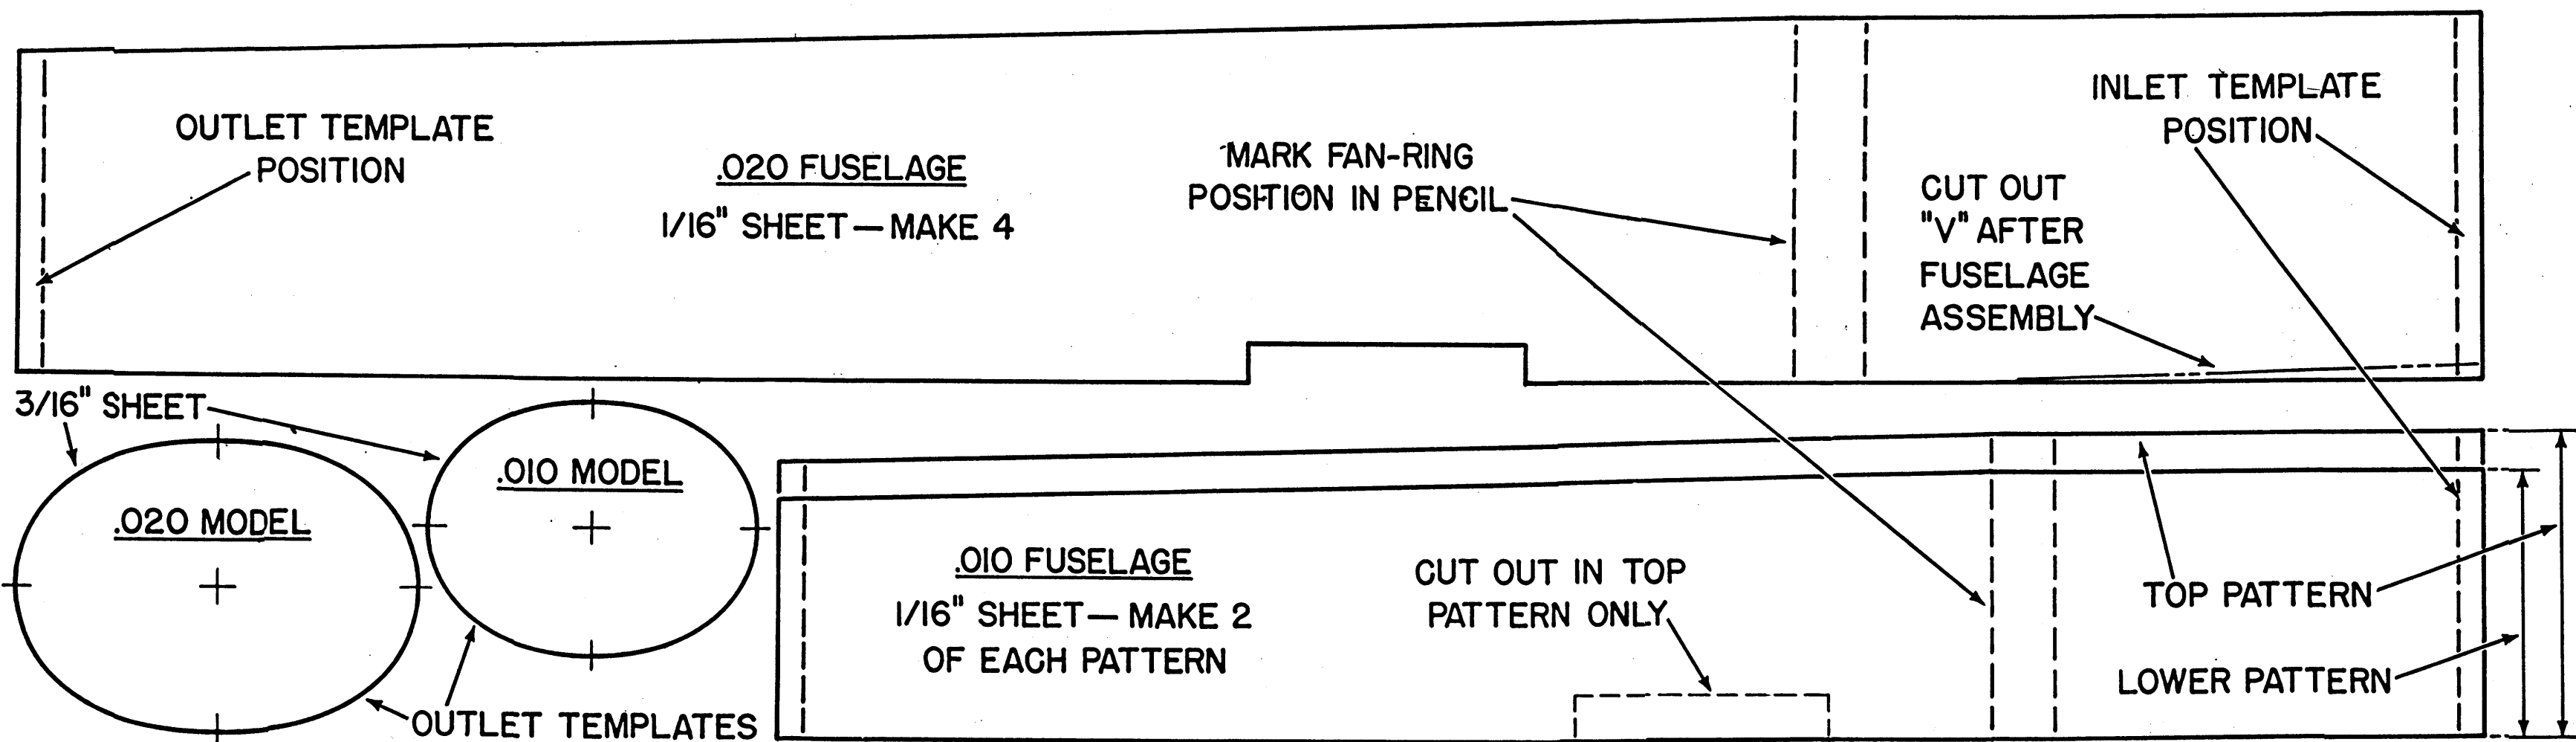

# DUCTED FAN MINI-DELTA

Copyright 1964  
The Condé Nast Publications Inc.

